
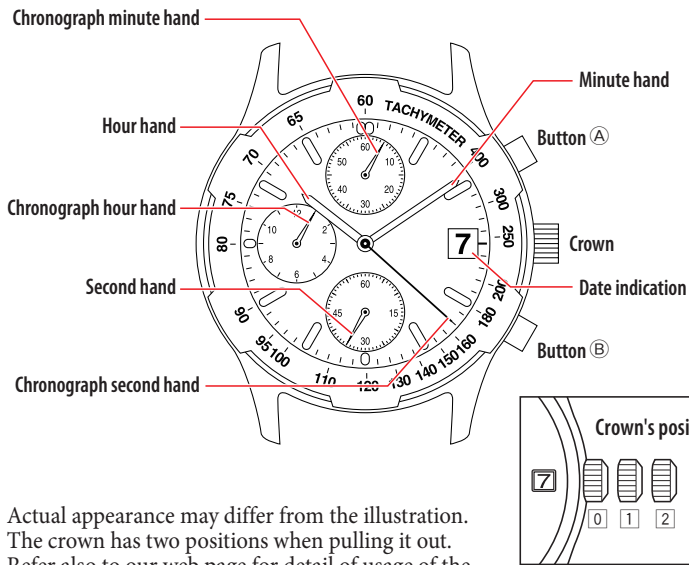


- To see details of specifications and operations, refer to the instruction manual:  051x instruction manual

Component identification



- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.
(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Setting the time

- Pull the crown out to position 2** when the small second hand points 0 second.
- Rotate the crown to set the time.**
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
 - Change of date indication shows it just became AM. Take care the time set is AM or PM.
- Push the crown in to position 0** in accordance with a reliable time source to finish the procedure.
The small second hand starts moving.

Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

- Pull the crown out to position 1.**
- Rotate the crown to adjust the date indication.**
- Push the crown in to position 0** to finish the procedure.

Using the chronograph

- Measuring up to 12 hours in 1 second increments.

- Push the crown in to position 0.**
- Press and release the upper right button A.**
The chronograph starts moving.

Start/stop: press button A.

Reset: press button B while the chronograph is stopped.

- Be sure to reset chronograph after finishing measurement.

Adjusting the 0 position of the chronograph second hand

Adjust the position of the chronograph second hand when it does not return to the 0 position after resetting the chronograph or it settles at a wrong position due to strong shock or other causes.

- Pull the crown out to position 2.**
- Press and release the upper right button A repeatedly to adjust the chronograph second hand to the 0 position.**
 - Pressing and holding the button moves the hand continuously.
- Press and release the lower right button B.**
The chronograph minute and hour hands return to the 0 position. If not, repeat step 2.
- Set the time and push the crown in to position 0.**