


## 8723/8725/8729 Abbreviated instruction

 
ENGLISH

- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual: 8723/8725/8729 [Click Here](#) 

## Component identification

## Model with date/24-hour indicator


Equipped with a date hand at the 12 o'clock position, and a 24-hour hand at the 6 o'clock position.

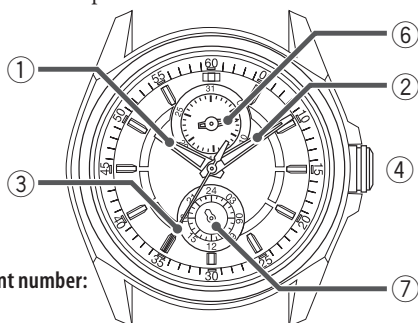

Movement number:  
8723

## Model with date/day indicator

 
Equipped with a date hand at the 3 o'clock position, and a day hand at the 9 o'clock position.

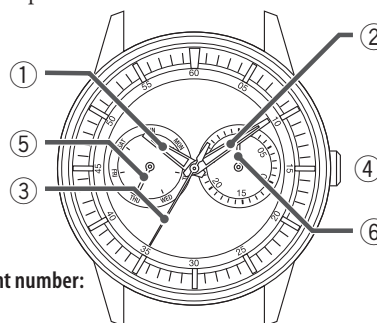

Movement number:  
8725

## Model with date/day/24-hour indicator

 
Equipped with a date hand at the 3 o'clock position, a 24-hour hand at the 6 o'clock position, and a day hand at the 9 o'clock position.

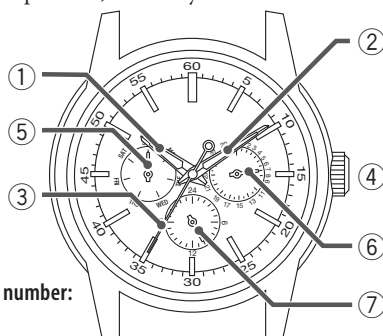

Movement number:  
8729

- ① Hour hand
- ② Minute hand
- ③ Second hand
- ④ Crown
- ⑤ Day hand
- ⑥ Date hand
- ⑦ 24-hour hand

## Crown's positions

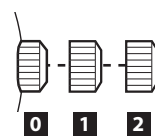 

- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

## Adjusting the time

### 1 Pull the crown out to position ① when the second hand points to 12:00 (0 second).

All the hands stop.

### 2 Rotate the crown to adjust the day. (only for models with a day indicator)

- As the day hand moves in conjunction with the hour/minute hand, adjust the day first and then adjust the time.
- The day hand can only be moved by rotating the crown clockwise. You cannot adjust the day hand independently.

### 3 Rotate the crown to adjust the time.

- Pay attention the date hand to ensure AM or PM time is set properly.
- For models with a 24-hour indicator, check the 24-hour hand to ensure AM or PM time is set properly.

### 4 Push the crown in to position ② in accordance with a reliable time source to finish the procedure.

- The date indicator begins to change at about 22:30 and has finished changing by about 0:00.
- The day indicator begins to change at about from 0:00 and has finished changing by about 5:00 (only for models with a day indicator).
- Both hands can only be moved by rotating the crown clockwise.

## Adjusting the date

Adjust the date indication on the first days of March, May, July, October and December.

- When the time on the watch is between 21:00 and 0:00, do not execute the adjustment. Otherwise the date indication may change improperly.

### 1 Pull the crown out to position ①.

### 2 Rotate the crown counterclockwise to adjust the date.

### 3 Push the crown in to position ② to finish the procedure.