
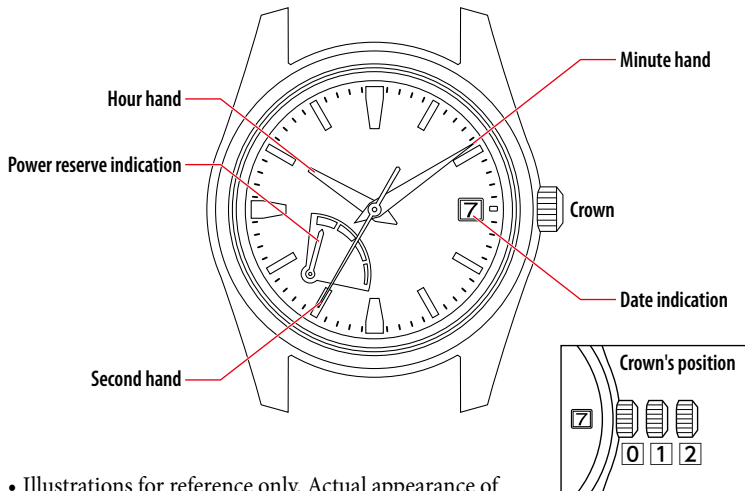 


- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual:  J850 instruction manual

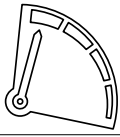 
 
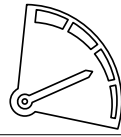 
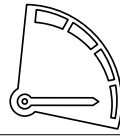 
## Component identification



- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

## Checking the power reserve

Power reserve is indicated in 4 levels.

Level	3	2	1	0
Power reserve indication				
Meaning	Power reserve is sufficient.	Power reserve is OK.	Power reserve is getting low.	Insufficient charge warning has started.
	OK for normal use.		Charge immediately	

## Setting the time

1. Pull the crown out to position **2** when the second hand points **0** second.
2. Rotate the crown to set the time.
  - Take care the time set is AM or PM.
  - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
3. Push the crown in to position **0** in accordance with a reliable time source.

## Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
  - Date indication adjustment is required on the first days of March, May, July, October and December.
1. Pull the crown out to position **1**.
  2. Rotate the crown counterclockwise to set the date indication.
  3. Push the crown in to position **0** to finish the procedure.